

CENTRAL SYSTEMS ON - GOING MAINTENANCE

WEEKLY



Every other day turn the handle in a clockwise direction to mix and aerate the compost. When mixing, ensure that the drum rotates 6 complete revolutions (42 turns of the handle) for the Centrex 1000 and 2000. For the Centrex 3000 ensure the drum is rotated 10 complete revolutions (70 turns of the handle)

Prior to turning the drum Compost Sure Blue should be added through the access door to the amount of one cup per person per day, even if it was only used for urination. Approximately 2 teaspoons (3-4 sprays) should also be added onto the surface of the compost before rotation.




BI-WEEKLY

Add one tablespoon of Microbe Mix to the Bio-drum™ to 'recharge' the pile. This will help to ensure your microbe colony stays constant and healthy.



QUARTERLY

Rake the evaporation chamber: Remove the finishing drawer. Rake any solid debris from the floor of the toilet under the drawer (evaporation chamber), paying extra attention to the two back corners of the toilet as this is where debris may accumulate. Remove and dispose of the solid debris.

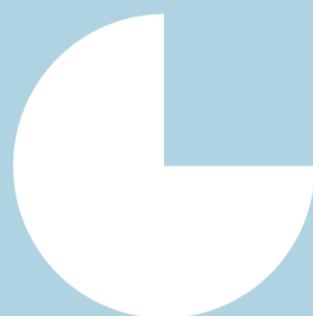

BI-ANNUAL

Clean the drum screen. Spray the Bio-drum™ screen with Compost Quick and let sit for 15 minutes (this will help to loosen the debris if the screen is not too encrusted). Scrub the screen vigorously with a wire brush. If brushing the screen does not clear it and liquid is still not draining through the screen, you may have to use a screwdriver or nail to clear each hole in the drum screen.



PERIODICALLY

Remove compost from the Bio-drum™. When the Bio-drum™ is half full (level with the middle of the drum hub at the front of the Bio-drum™) it is time to remove compost.

